


## Filling The Bottle


- 1 - Connect hose with trigger and extraction hose to quick connect on the bottle.
- 2 - Set shop air pressure to 90 PSI, and connect to the bottle.
- 3 - Turn the Extract/Dispense valve knob in the Extract direction until it stops.
- 4 - Turn the inlet valve lever to Extract mode.
- 5 - Place end of extraction hose into container of recommended transmission fluid.
- 6 - Press and hold (or lock in hold position with clip) the handle lever.
- 7 - Press hose trigger to transfer fluid from container into the bottle.

 **ALWAYS wear approved eye protection.**

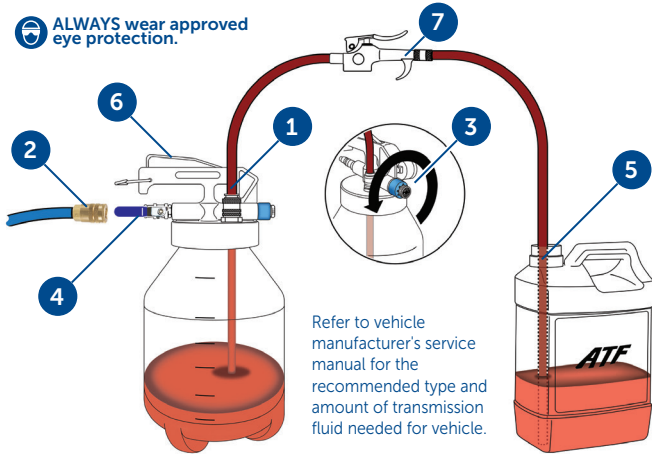

## Filling Vehicle Transmission

- 1 - Connect hose with trigger to quick connect on the bottle.
- 2 - Connect trigger and appropriate adapter to vehicle transmission.
- 3 - Set shop air pressure to 90 PSI, and connect to bottle.
- 4 - Turn the Extract/Dispense valve knob in the Dispense direction until it stops.
- 5 - Turn the inlet valve lever to Dispense mode.
- 6 - Press and hold (or lock in hold position with clip) the handle lever.
- 7 - Press hose trigger to transfer fluid from the bottle into vehicle transmission.

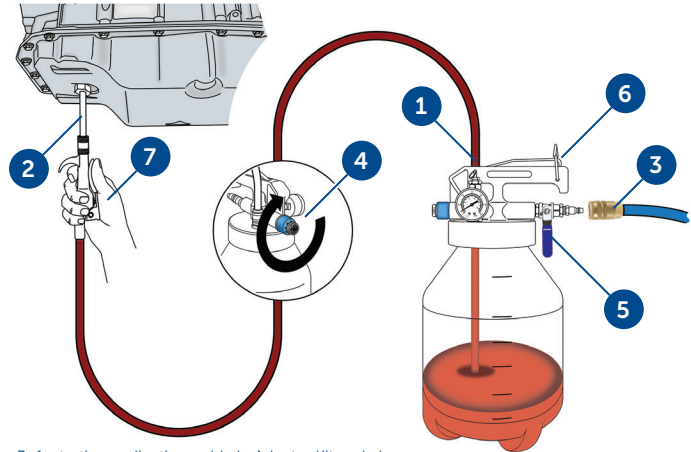

Refer to the application guide in Adapter Kit and choose an adapter as needed to fill the vehicle's transmission.