


Blind Spot Monitoring (BSM) Control Module Installation Angle Measurement Procedure

1. Replace the blind spot monitoring (BSM) bracket with a new one.
2. Install the blind spot monitoring (BSM) control module.
3. Using a digital angle gauge, verify that the top and bottom angles are 0°.

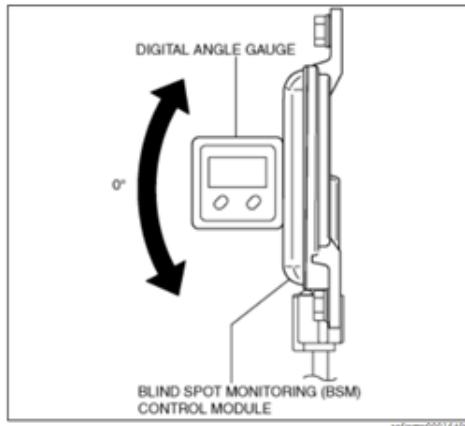


actmpw00013409

Note

- Use a commercially-available digital angle gauge.

4. Place the SST (plumb bob) on the blind spot monitoring (BSM) control module installation bolts and mark the center positions (points A and B) on the floor surface.

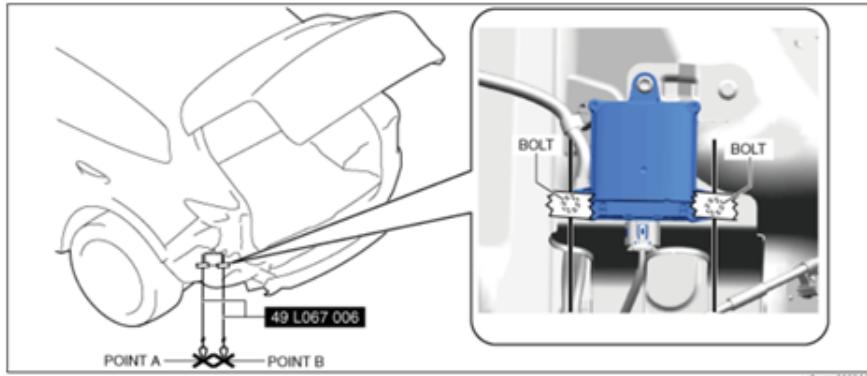

actmpw00006617